



### DHE, DEL, DHB-E

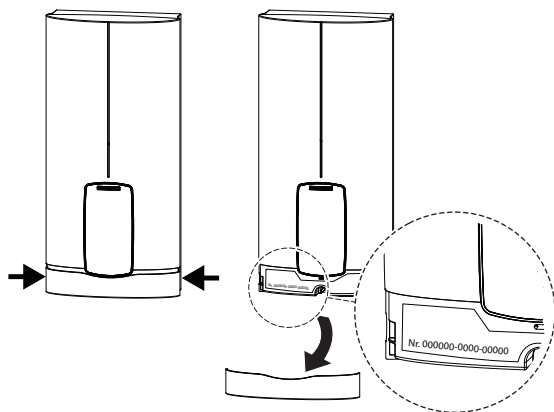


Pull out and down to view rating plate.

### DHF

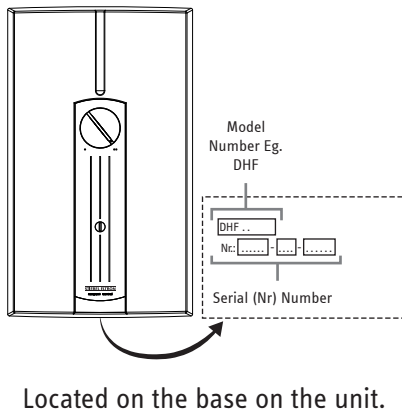

Located on the base on the unit.


### Simplex

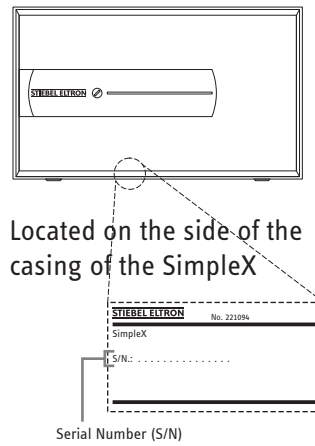

Located on the side of the casing of the SimpleX


Serial Number (S/N)

### Pre 2020 DHE, DEL, DHB-E

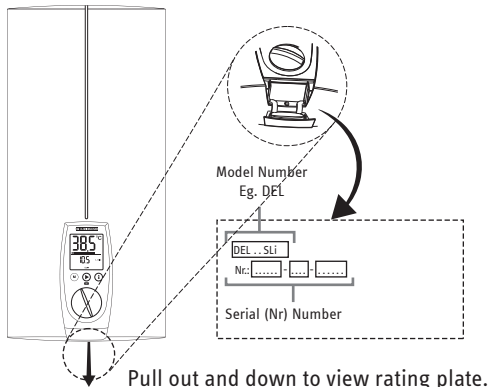


Pull out and down to view rating plate.


### DHCE

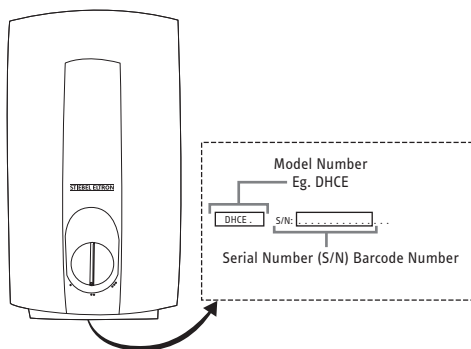


### DEM 6

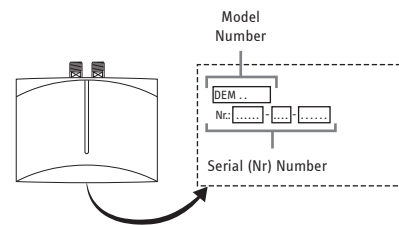


### SNE, SNU

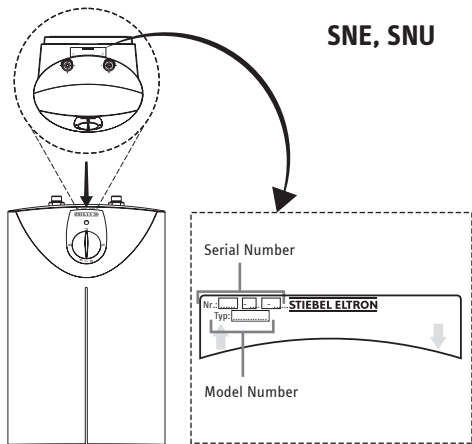

### SHC

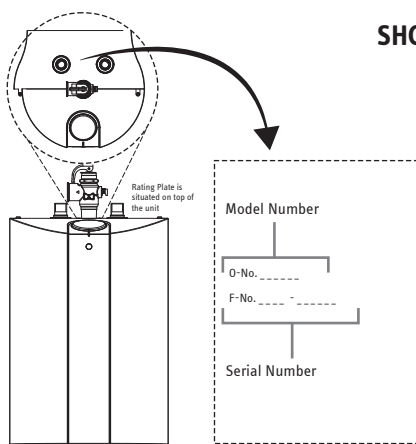


### WWK

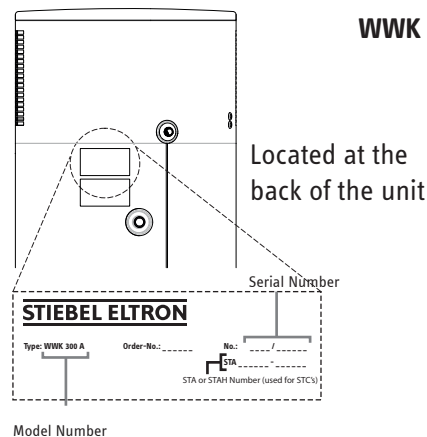


Model Number

### HTE 4, HTE 5, Ultronic

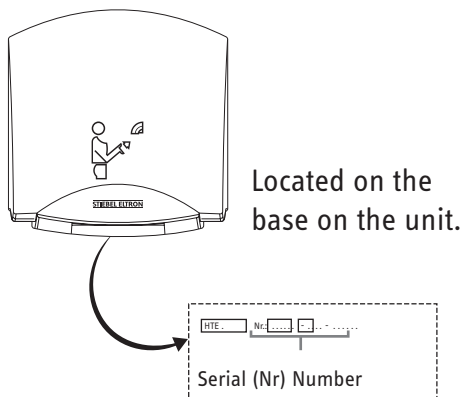

### CNS Range

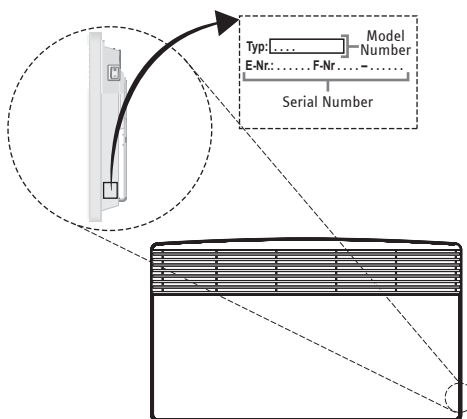

### CON | CK

