

# STIEBEL ELTRON

## Stream 3

Ultra filtration water filter (3 stage)  
0.01 micron water filter



Stream 3

WATER FILTER

Plumbing installation

This water filter system must be installed in accordance with AS/NZS3500 plumbing and local regulations by a qualified person.

Warranty

For full warranty information please visit [www.stiebel.co.nz](http://www.stiebel.co.nz).

Technical Support



STIEBEL ELTRON NZ Limited  
Telephone: 09 486 2221 (New Zealand)  
Website: [www.stiebel.co.nz](http://www.stiebel.co.nz)  
Email: [service@stiebel.co.nz](mailto:service@stiebel.co.nz)



Product features

- › Simple push & click cartridge replacement
- › Swing arm function allows for easy replacement of cartridges
- › Compact 10 inch cartridges take up less space under sink
- › Automatic shut off if cartridges are disconnected preventing water leakage
- › Encapsulated filters for easy removal & prevention of contamination
- › Colour coded filter cartridges for easy replacement:
- › Red – Sediment filters:
- › Rust, sediments, mud & particles >1 micron
- › Yellow – Activated Carbon filters:
- › Bad taste, odours, chlorine, THMs, VOCs, pesticides, herbicides, heavy metals & particles >0.5 micron
- › Purple – Ultra-Filtration Membrane filters:
- › Bacteria, cysts, algae & particles >0.01 micron
- › Includes tap and 350kPa pressure limiting valve
- › WaterMark approved, licence number WMKA22044, AS/NZS3497
- › Filter cartridge life up to 2160 Litres (dependent on water quality)

Dimensions

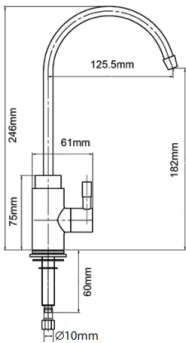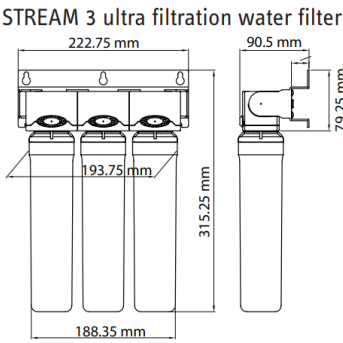

Type	Stream 3 Filter
Installation requirements	AS/NZS3500 & local requirements
Type of installation	Under sink
Permissible operating pressure	350KPA
Height	315.25 mm
Width	222.75 mm
Depth	90.5 mm
Approvals	WaterMark Lic No. WMKA22044, AS/NZS3497
Pack includes: Tap x 1, manifold and cartridges x 1, 350kPa PLV x 1, Tap fixing kit x 1, Plastic tube (1.5m ø 1/4") x 1, L connector x 1, Screws and plugs for mounting x 6, Diverter ball valve x 1 & Tube connector x 2	

STIEBEL ELTRON is committed to our policy of continual improvement, some features may have subsequently been changed or even removed. Our advisors will be happy to consult with you regarding the currently applicable equipment features. The images used in this data sheet are for reference only.